

Propeller Shaft


DRIVE SHAFT SYSTEM

2. Propeller Shaft


A: REMOVAL

NOTE:

- Before removing propeller shaft, wrap metal parts with a cloth or rubber material.
- In case of DOJ type, before removing propeller shaft, wrap metal parts (installed at the rubber boot of center DOJ) with a cloth or rubber material, as shown in the figure. Rubber boot may be damaged due to interference with adjacent metal parts while bending the DOJ during removal.

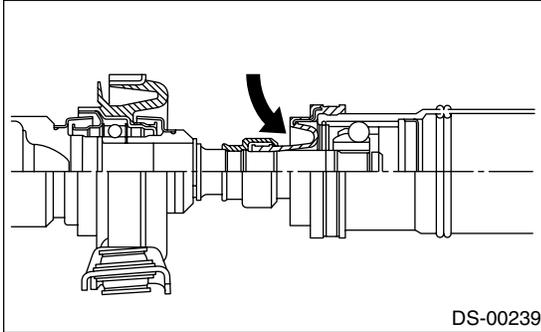


- 1) Disconnect the ground cable from battery.
- 2) Shift the select lever or gear shift lever to neutral.
- 3) Release the parking brake.
- 4) Lift-up the vehicle.
- 5) Remove the center exhaust pipe.
- 6) Remove the rear exhaust pipe and muffler.
- 7) Remove the heat shield cover.

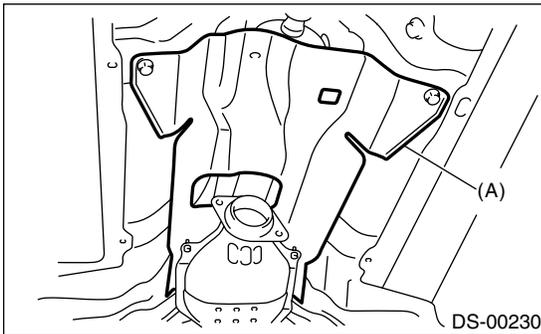


(A) Heat shield cover

- 8) Make matching marks on the flange yoke and rear differential before removal.

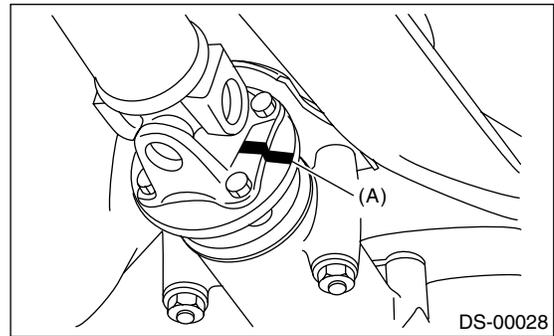

(A) Alignment mark

- 9) Remove the three bolts which hold propeller shaft to rear differential.
- 10) Remove the remaining bolt.
- 11) Remove the two bolts which hold center bearing to vehicle body.

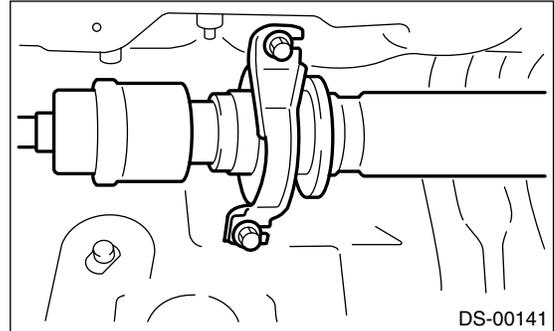


- 12) Remove the propeller shaft from transmission.

CAUTION:

- Be careful not to damage oil seals and frictional surface of sleeve yoke.
- Cover the center exhaust pipe with a cloth to keep off any ATF or oil spilled from transmission when removing propeller shaft.

NOTE:


- Use a container to catch ATF or oil flowing from propeller shaft.

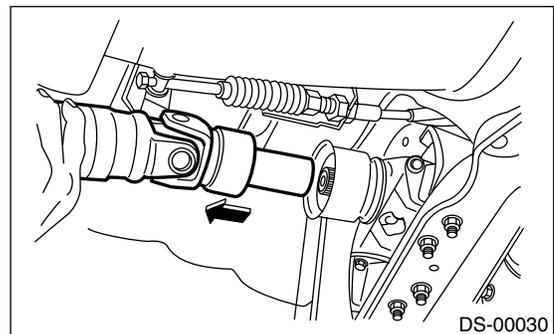

- 13) Install the extension cap to transmission.

NOTE:

If extension cap is not available, place vinyl bag over opening and fasten with string to prevent gear oil or ATF from leaking.

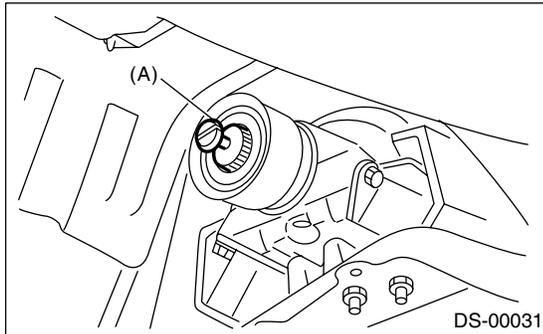


(A) Extension cap

B: INSTALLATION

1) Insert the sleeve yoke into the transmission and attach center bearing to body.

Tightening torque:


52 N·m (5.3 kgf-m, 38.3 ft-lb)

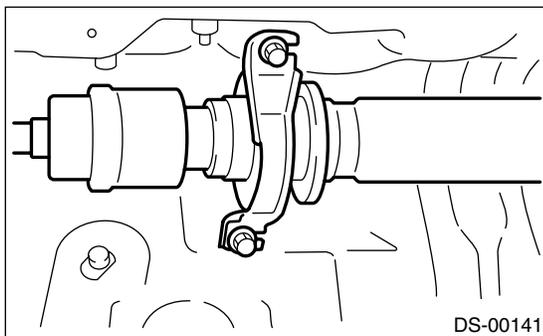

2) Align the matching marks and connect the flange yoke and rear differential.

Tightening torque:

31 N·m (3.2 kgf-m, 23.1 ft-lb)

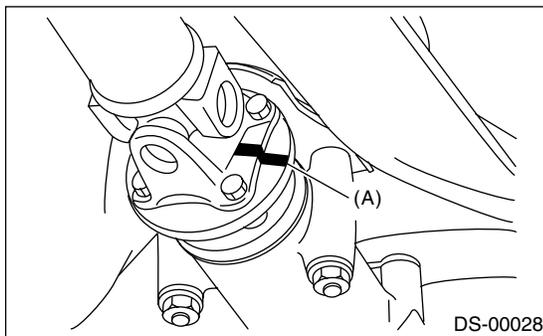

(A) Alignment mark

- 3) Install the heat shield cover.
- 4) Install the center exhaust pipe.
- 5) Install the rear exhaust pipe and muffler.
- 6) Lower the vehicle.

7) Connect the battery ground cable to battery.

C: INSPECTION

NOTE:

Do not disassemble propeller shaft. Check the following and replace if necessary.

- Tube surface for dents or cracks
- Splines for deformation or abnormal wear
- Joints for non-smooth operation or abnormal noise
- Center bearing for free play, noise or non-smooth operation.
- Oil seals for abnormal wear or damage
- Center bearing for breakage


Check the following points with propeller shaft installed in vehicle.

1. JOINTS AND CONNECTIONS

- 1) Remove the center exhaust pipe.
- 2) Remove the heat shield cover.
- 3) Check for any looseness of the yoke flange mounting bolts which connect to rear differential and center bearing bracket mounting bolts.

2. SPLINES AND BEARING

- 1) Remove the center exhaust pipe.
- 2) Remove the rear exhaust pipe and muffler.
- 3) Remove the heat shield cover.
- 4) Turn the propeller shaft by hand to see if abnormal free play exists at splines. Also move yokes to see if abnormal free play exists at spiders and bearings.

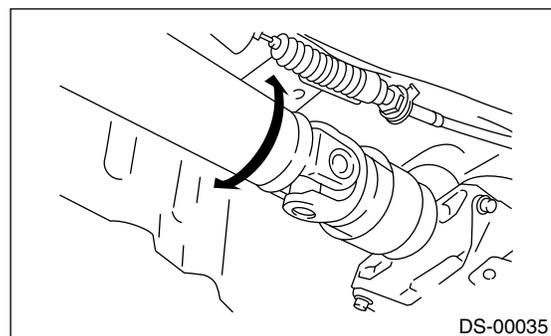

3. RUNOUT OF PROPELLER SHAFT

- 1) Remove the center exhaust pipe.
- 2) Remove the rear exhaust pipe and muffler.
- 3) Remove the heat shield cover.
- 4) Set the dial gauge with its indicator stem at center of propeller shaft tube.
- 5) Turn the propeller shaft slowly by hands to check for "runout" of propeller shaft.

Transmission Mounting System


AUTOMATIC TRANSMISSION

10. Transmission Mounting System

A: REMOVAL

1. PITCHING STOPPER


- 1) Disconnect the ground cable from battery.
- 2) Remove the intercooler. (Turbo model)
<Ref. to IN(H4DOTC)-12, REMOVAL, Intercooler.>
- 3) Remove the air intake chamber. (Non-turbo model)
<Ref. to IN(H6DO)-7, REMOVAL, Air Intake Chamber.>
- 4) Remove the pitching stopper.

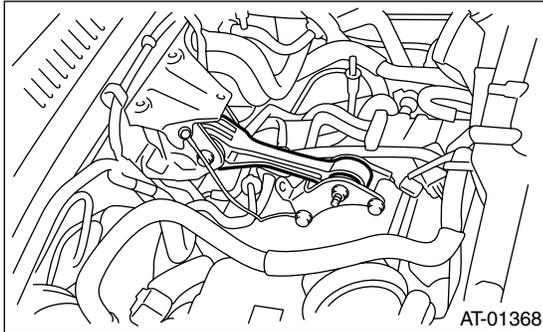

2. TRANSMISSION REAR CROSSMEMBER & REAR CUSHION RUBBER

- 1) Disconnect the ground cable from battery.
- 2) Jack-up the vehicle and support it with rigid racks.
- 3) Remove the center exhaust pipe, rear exhaust pipe and muffler. (Turbo model)
<Ref. to EX(H4DOTC)-8, REMOVAL, Center Exhaust Pipe.> <Ref. to EX(H4DOTC)-12, REMOVAL, Rear Exhaust Pipe.> <Ref. to EX(H4DOTC)-13, REMOVAL, Muffler.>
- 4) Remove the front exhaust pipe, rear exhaust pipe and muffler. (Non-turbo model)
<Ref. to EX(H6DO)-4, REMOVAL, Front Exhaust Pipe.> <Ref. to EX(H6DO)-7, REMOVAL, Rear Exhaust Pipe.> <Ref. to EX(H6DO)-9, REMOVAL, Muffler.>
- 5) Remove the heat shield cover.
- 6) Set the transmission jack under the transmission. Make sure that the support plate of transmission jack does not touch the oil pan.

- 7) Remove the transmission rear crossmember.

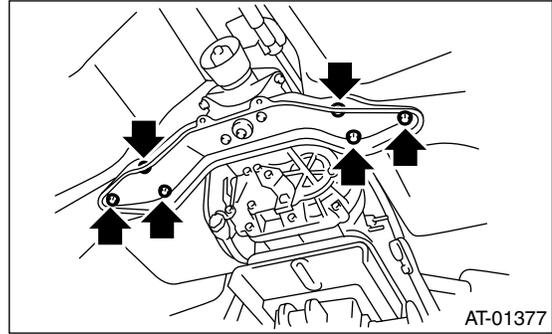

- 8) Remove the rear cushion rubber from transmission.


B: INSTALLATION

1. PITCHING STOPPER

- 1) Install the pitching stopper.

Tightening torque:

- T1: 50 N·m (5.1 kgf·m, 36.9 ft·lb)**
T2: 58 N·m (5.9 kgf·m, 42.8 ft·lb)

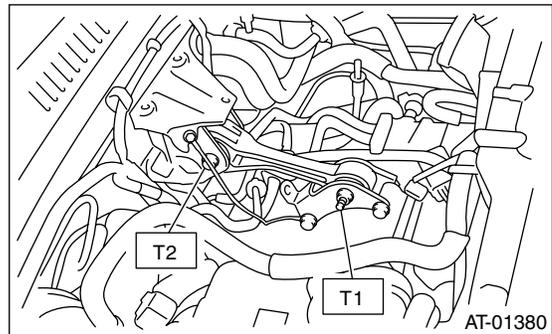

- 2) Install the intercooler. (Turbo model)
<Ref. to IN(H4DOTC)-12, INSTALLATION, Intercooler.>
- 3) Install the air intake chamber. (Non-turbo model)
<Ref. to IN(H6DO)-7, INSTALLATION, Air Intake Chamber.>
- 4) Connect the battery ground cable to battery.

2. TRANSMISSION REAR CROSSMEMBER & REAR CUSHION RUBBER

1) Install the rear cushion rubber to transmission.


Tightening torque:

35 N·m (3.6 kgf-m, 26 ft-lb)

2) Install the crossmember.

Tightening torque:

75 N·m (7.6 kgf-m, 55.3 ft-lb)

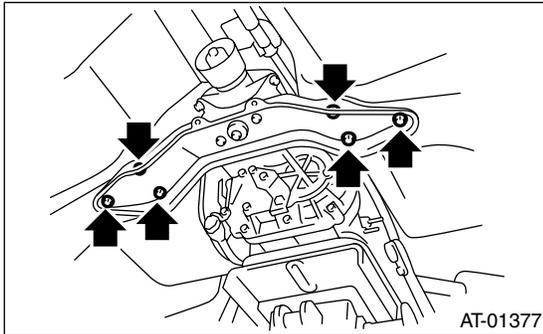

3) Remove the transmission jack.

4) Install the heat shield cover.

5) Install the center exhaust pipe, rear exhaust pipe and muffler. (Turbo model)

<Ref. to EX(H4DOTC)-9, INSTALLATION, Center Exhaust Pipe.> <Ref. to EX(H4DOTC)-12, INSTALLATION, Rear Exhaust Pipe.> <Ref. to EX(H4DOTC)-13, INSTALLATION, Muffler.>

6) Install the front exhaust pipe, rear exhaust pipe and muffler. (Non-turbo model) <Ref. to EX(H6DO)-5, INSTALLATION, Front Exhaust Pipe.> <Ref. to EX(H6DO)-7, INSTALLATION, Rear Exhaust Pipe.> <Ref. to EX(H6DO)-9, INSTALLATION, Muffler.>

7) Connect the battery ground cable to battery.

C: INSPECTION

Repair or replace parts if the results of the inspection below are not satisfied.

1. PITCHING STOPPER

Check pitching stopper for bends or damage. Ensure there are no cracks, hardening or damage on rubbers.

2. TRANSMISSION REAR CROSSMEMBER & REAR CUSHION RUBBER

Check the crossmember for bends or damage. Ensure there are no cracks, hardening, or damage on cushion rubbers.